Reinitializing the DP/4+

If your DP/4+ is behaving in peculiar ways (the display is showing alphanumeric characters that shouldn't be there or unexplainable Unexpected Event messages) and a soft reset (or turning the DP/4+ power off and then on again) won't cure the problem, try reinitializing the DP/4+.

> WARNING! THIS PROCESS WILL ERASE ALL RAM PRESETS! The 200 User Presets in the internal memory (RAM) are automatically loaded with the factory defaults after reinitialization. Good backup habits should be an important part of your routine. Save any important information by using the MIDI System Exclusive Dump feature of the DP/4+, or manually write down the relevant parameters using the provided Preset Parameter Worksheet (or a photo-copy). If you fail to do so, you may accidentally lose the presets you've created.

To reinitialize the DP/4+

1. While holding down the {SYSTEM"MIDI} button,
2. Press the {B} button.
3. Press the {>} button. The display shows:

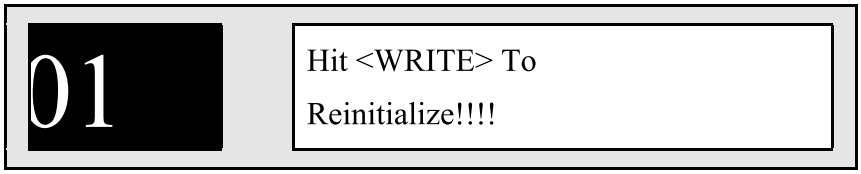

   Press the {CANCEL} button to quit *without* reinitializing the system, or

4. Press the {WRITE} button to reinitialize the DP/4+. Remember that by doing this you will replace *all* of the RAM Preset data in the DP/4+, and *all* System•MIDI parameters will be reset to their default range!

If reinitializing the DP/4+ does not correct the problem, then contact an Authorized ENSONIQ Repair Station.

Note: If the DP/4+ is sitting in an infinite loop of system errors (the display is continually cycling through errors), press the {SYSTEM"MIDI} button to escape this state.

Note: In the unlikely event of a system malfunction, you can save your entire set-up (all Preset Banks and System parameters) with a System Exclusive dump by pressing the {WRITE} button. This will help you restore all of the user-defined parameters. For more information about System Exclusive dumps, see *Section 5 — Storage*.